


FORD CROWN VICTORIA
1991 AND LATER
VASCAR WIRING DIAGRAM

SPEED SENSOR
 (FACTORY INSTALLED IN TRANSMISSION)

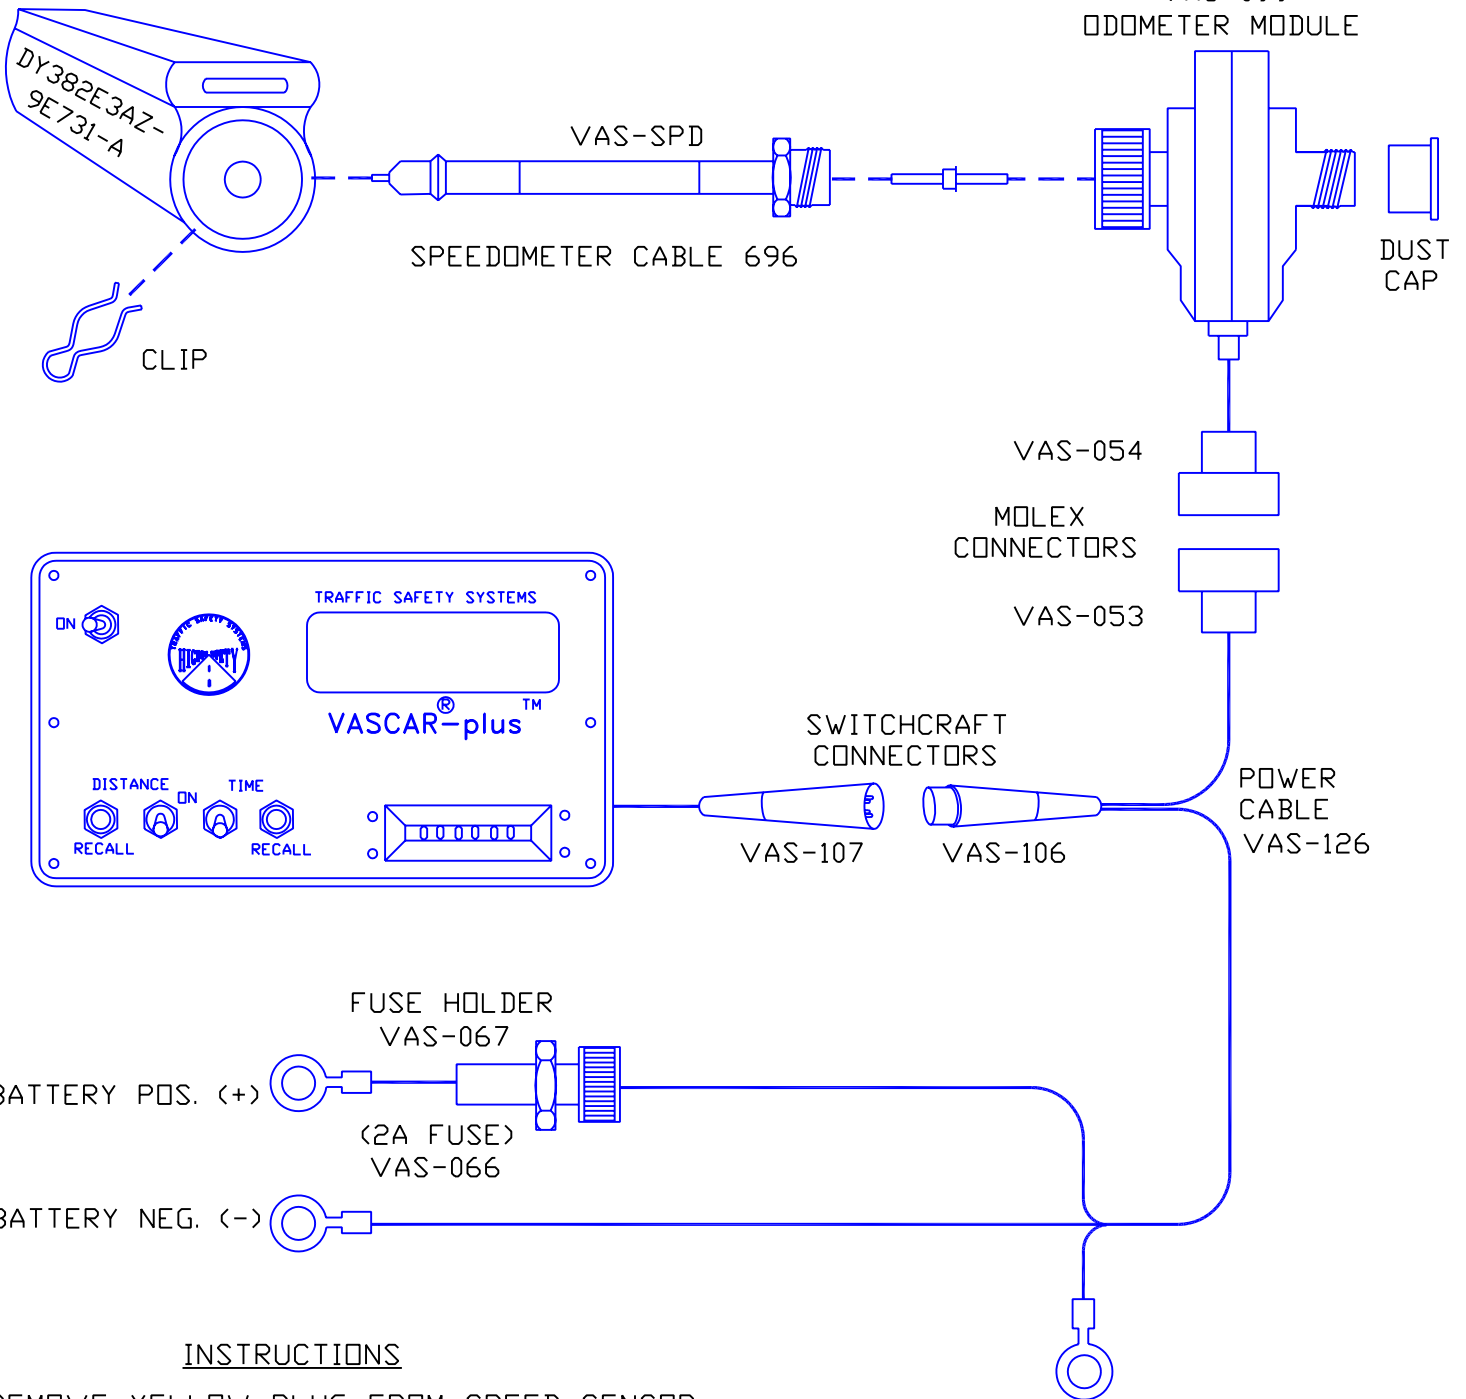

INSTRUCTIONS

REMOVE YELLOW PLUG FROM SPEED SENSOR.
 REMOVE WIRE CLIP FROM SPEED SENSOR.
 PLUG SPEEDOMETER CABLE INTO SENSOR, REPLACE
 WIRE CLIP. INSERT SQUARE KEY INTO ODOMETER
 MODULE AND ATTACH SPEEDOMETER CABLE.
 PLACE DUST CAP ON OTHER END OF MODULE.
 WHITE WIRE FROM ODOMETER MODULE PLUGS INTO
 POWER CABLE CONNECTOR ON VASCAR UNIT.

SHEET METAL GROUND

TRAFFIC SAFETY SYSTEMS
 A DIVISION OF POWER SYSTEMS & CONTROLS, INC.
 3206 LANVALE AVE.
 RICHMOND, VIRGINIA 23230
 (804) 353-3826