


# 2000 FORD EXPEDITION WITH ELECTRONIC SPEEDOMETER

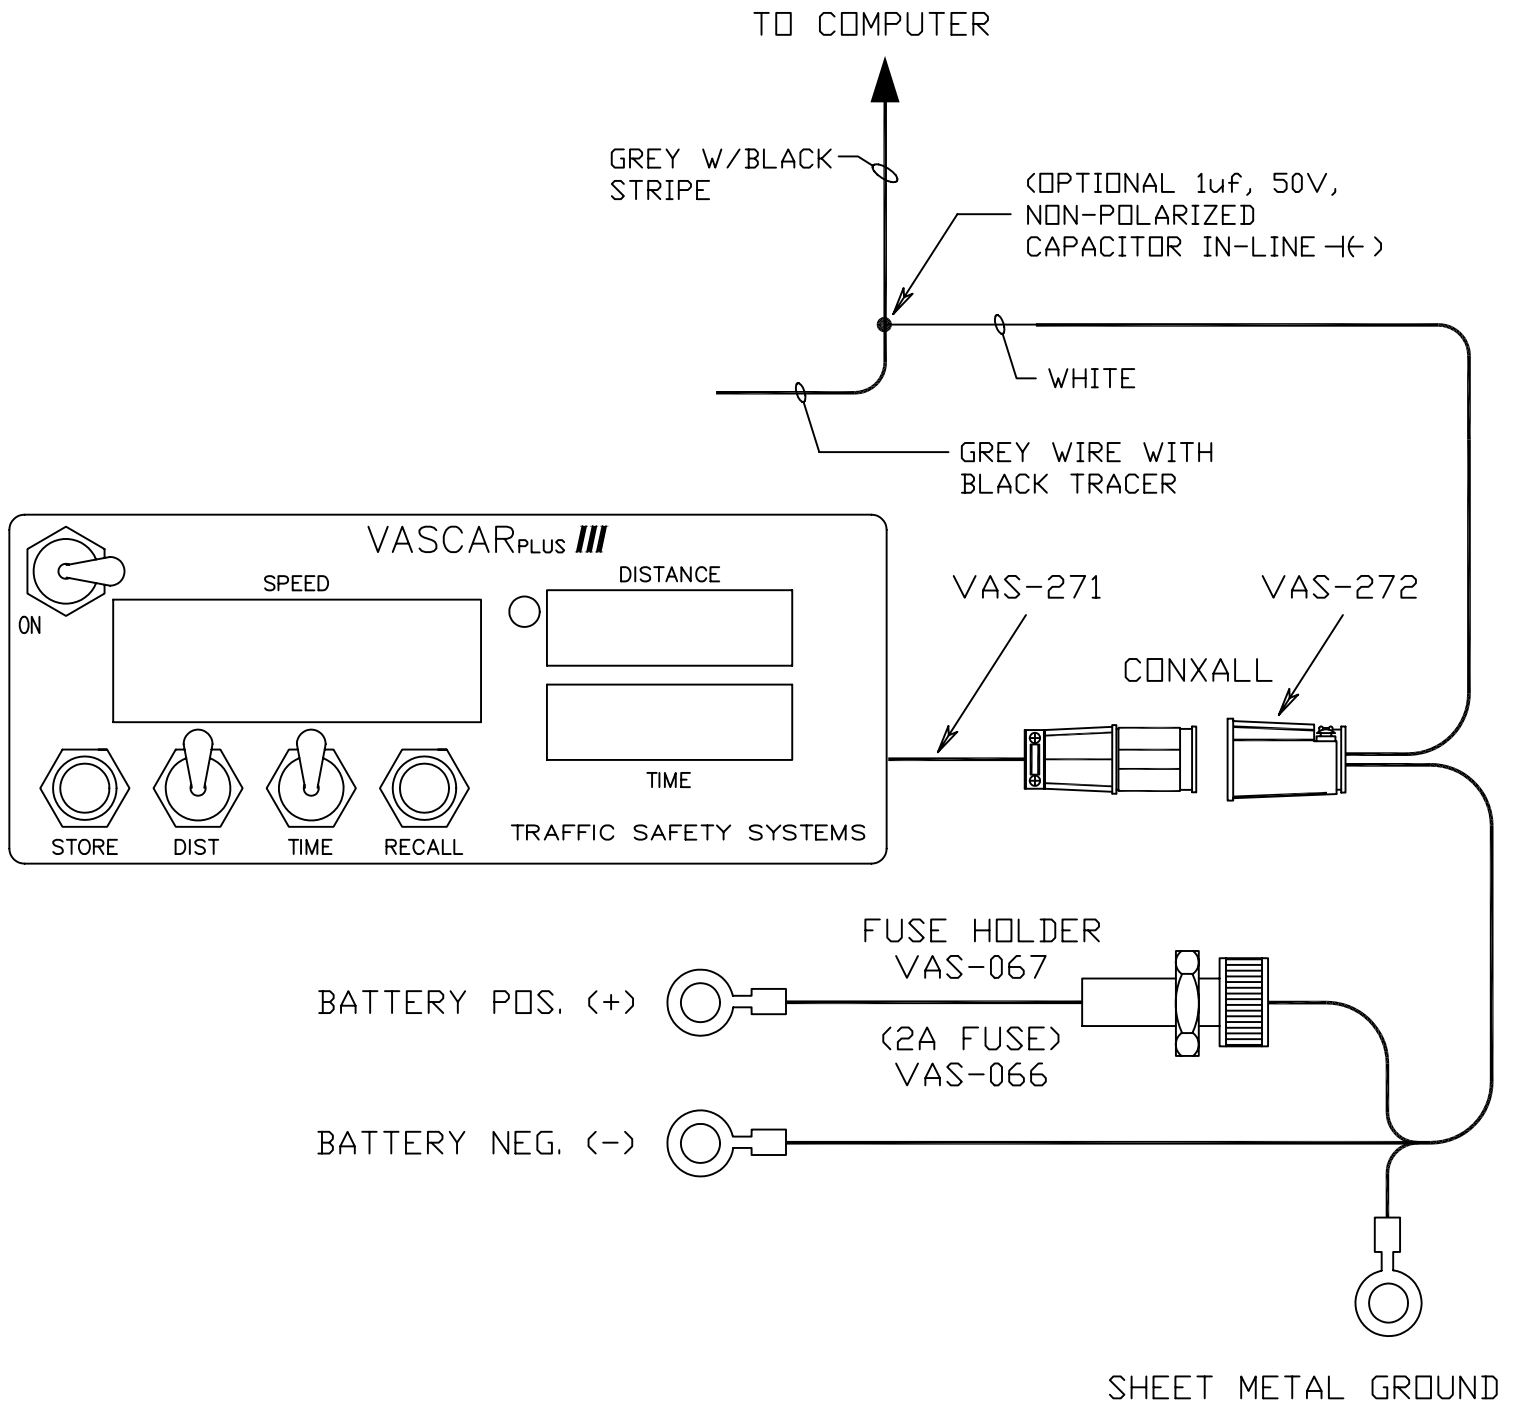

## INSTRUCTIONS

LOCATE LOWER LOOM IN ENGINE COMPARTMENT IN FRONT CORNER OF PASSENGER FIREWALL. THERE ARE THREE BUNDLES AND IN THE LOWERMOST LOOM LOCATE THE GREY WIRE WITH BLACK TRACER. HOOK THIS UP TO THE WIRE FROM THE ODOMETER MODULE. A 1µf, 50 VOLT, NON-POLARIZED CAPACITOR MAY BE NEEDED IN-LINE TO REMOVE THE DC BIAS.

**TRAFFIC SAFETY SYSTEMS**  
 A DIVISION OF POWER SYSTEMS & CONTROLS, INC.  
 3206 LANVALE AVE.  
 RICHMOND, VIRGINIA 23230  
 (804) 353-3826